

Casting a Write-In Vote on an AVM (lever voting machine)


1. Enter the booth and close the curtain. Look to the top of the machine.




2. Look for the number at the top of the machine that corresponds to the position for which you want to write in a person's name.



3. Lift the sliding door immediately above that number.

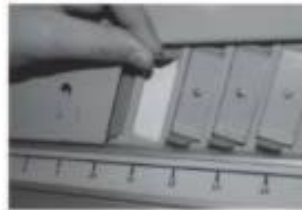

4. Write the person's name on the exposed piece of paper. **It takes two hands:** one to hold the door open and one to write with.

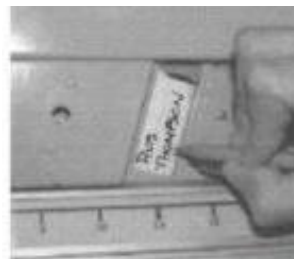

5. When finished, pull the handle to open the curtain and exit the booth.



- **Once you lift a write-in slide, you cannot change your mind** and use a candidate lever in that column. (This feature prevents over-voting.)
- **Do not write in the name of a candidate already on the ballot;** your vote will be voided.